




# Fitting Instructions: Aura Glide Corner Unit














www.questhardware.co.uk  
01280 822062

## PARTS


- A. N°2 Shelves
- B. N°2 Slides
- C. N°2 Arm
- D. N°1 Mounting Template
- E. N°2 Plastic Bush
- F. N°4 Stopper
- G. N°2 Pivoting Guide
- H. N°5 Caps
- I. N°1 Drilling Template

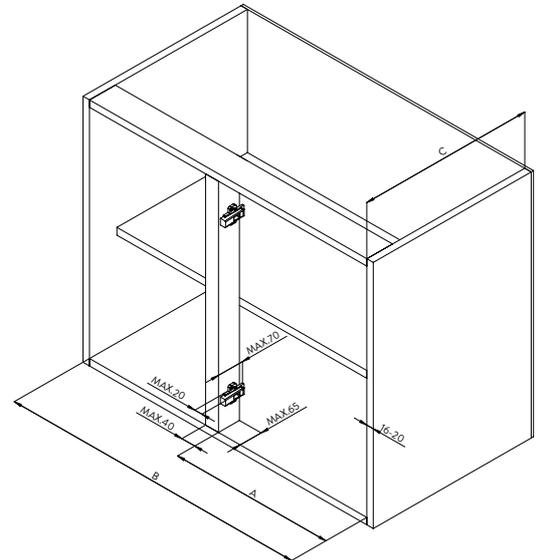

|           | A       | B        | C   |
|-----------|---------|----------|-----|
| Nuvola 40 | min 360 | min 800  | 470 |
| Nuvola 45 | min 410 | min 900  | 490 |
| Nuvola 50 | min 460 | min 900  | 490 |
| Nuvola 60 | min 560 | min 1000 | 490 |

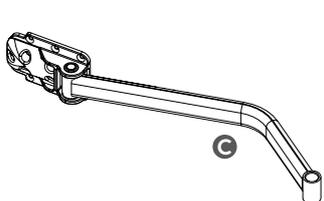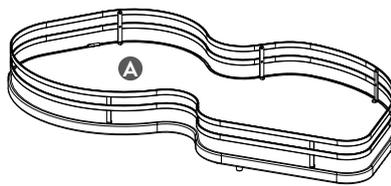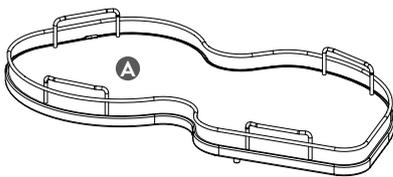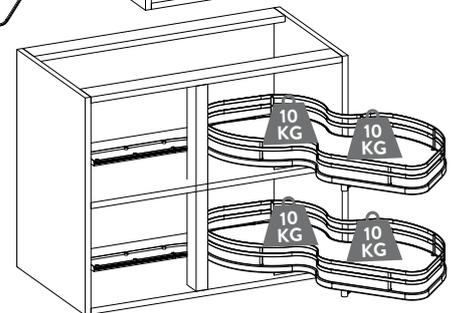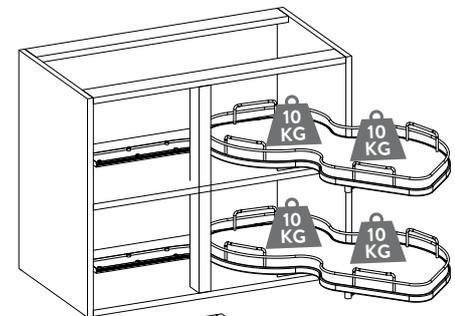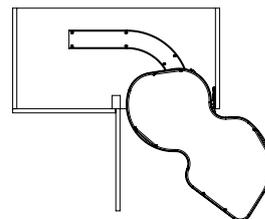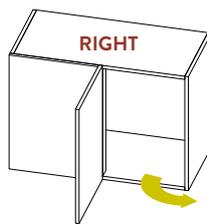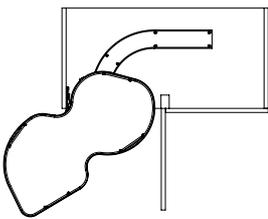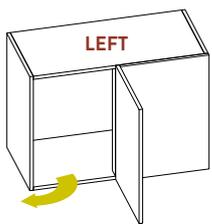

### ATTENTION


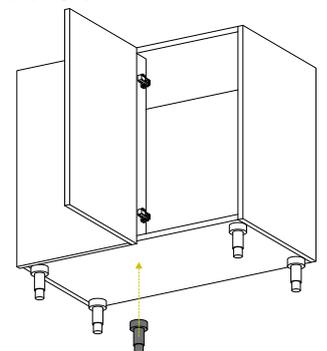


N° 28 4x25



1

Fix the plastic slides B according to the holes previously marked whit temèlate D.


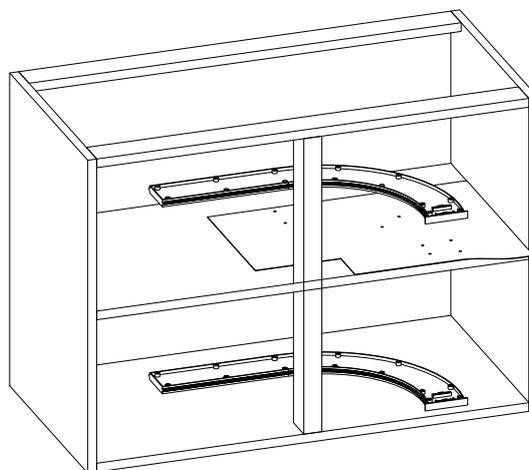
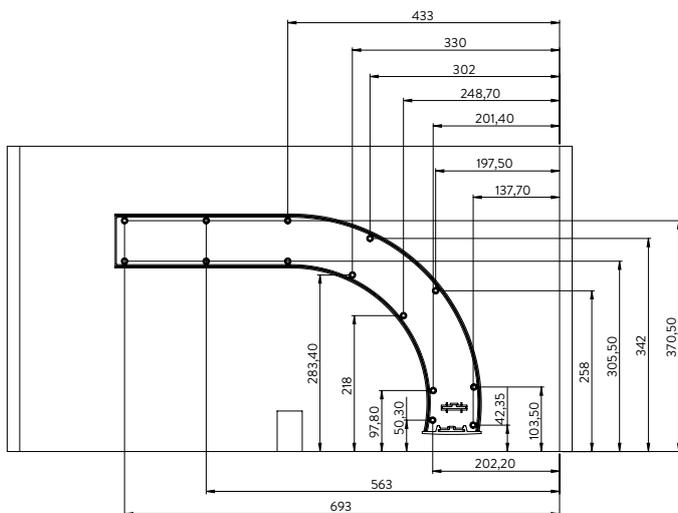


2


N° 12 6,3x16



Pre-drill the side cabinet using the specific mounting template I or respecting the quotes and then fix the mechanisms C on the cabinet using the provided euroscrews and Insert the plastic bushing E into the mechanism C.

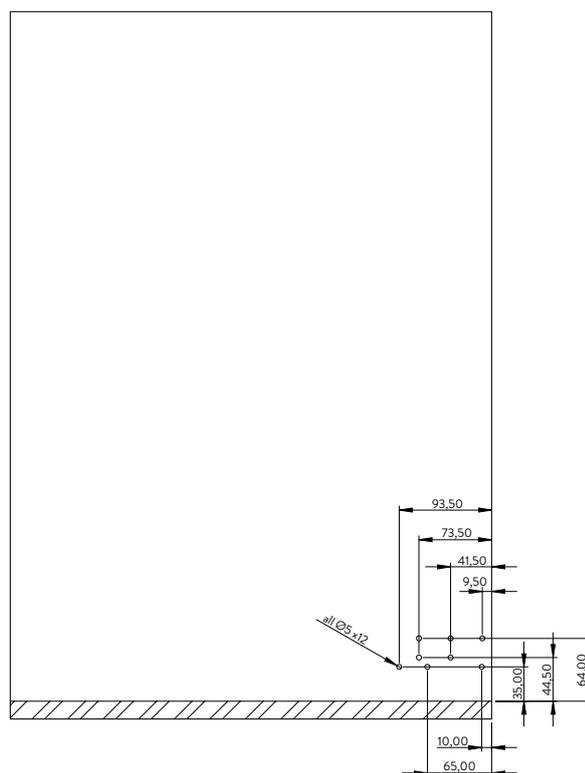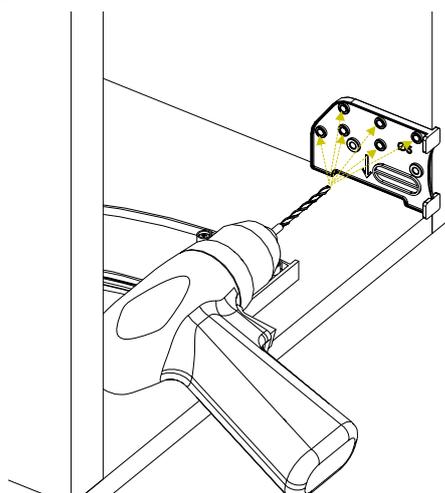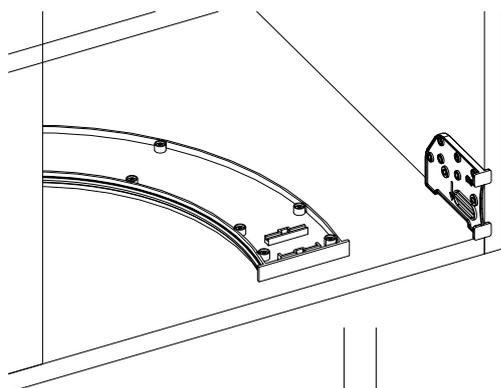


2

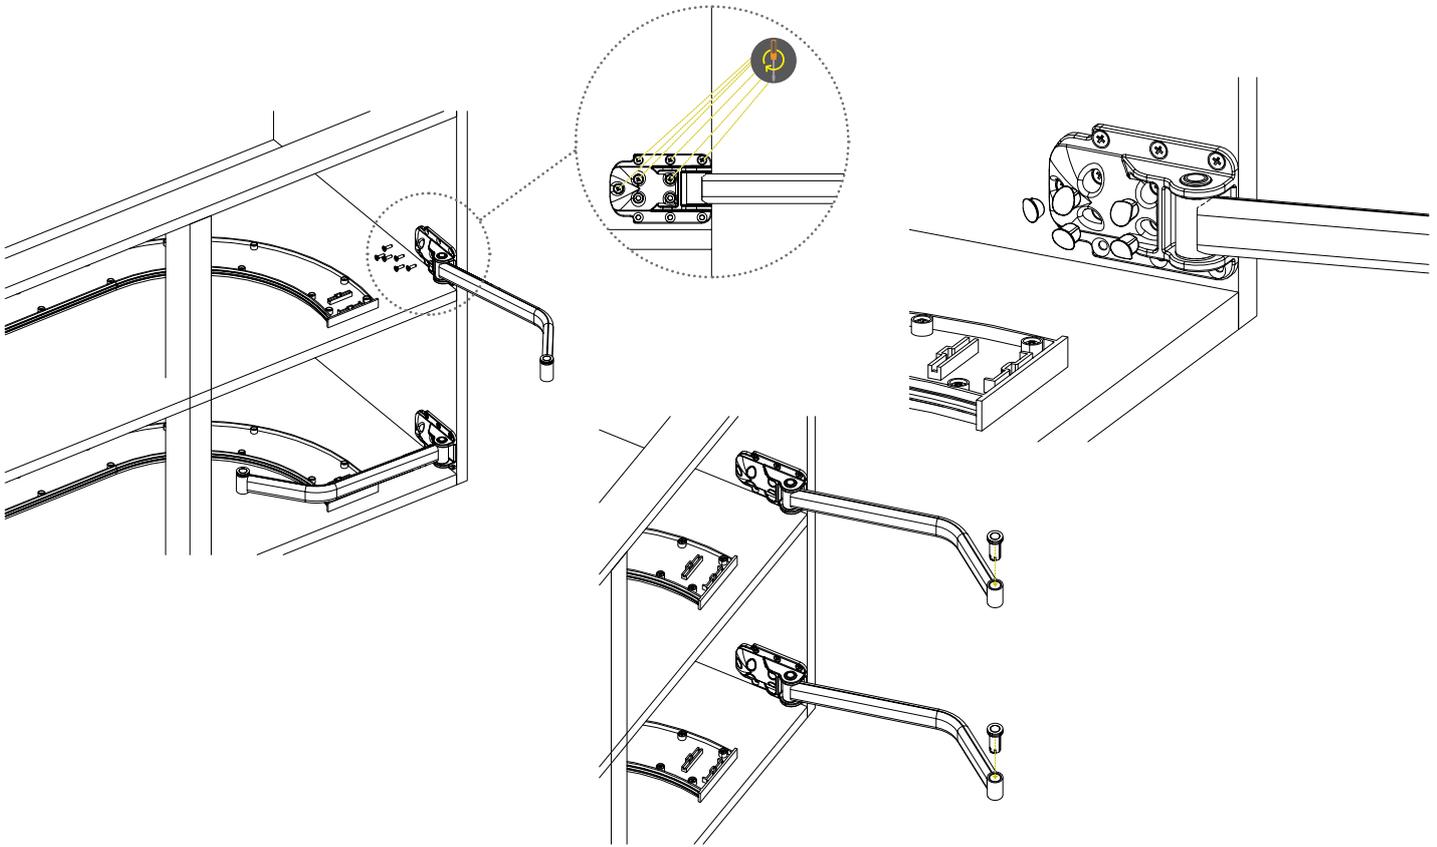

3


Put the rotation pin G along with the stopper F into the slide B.

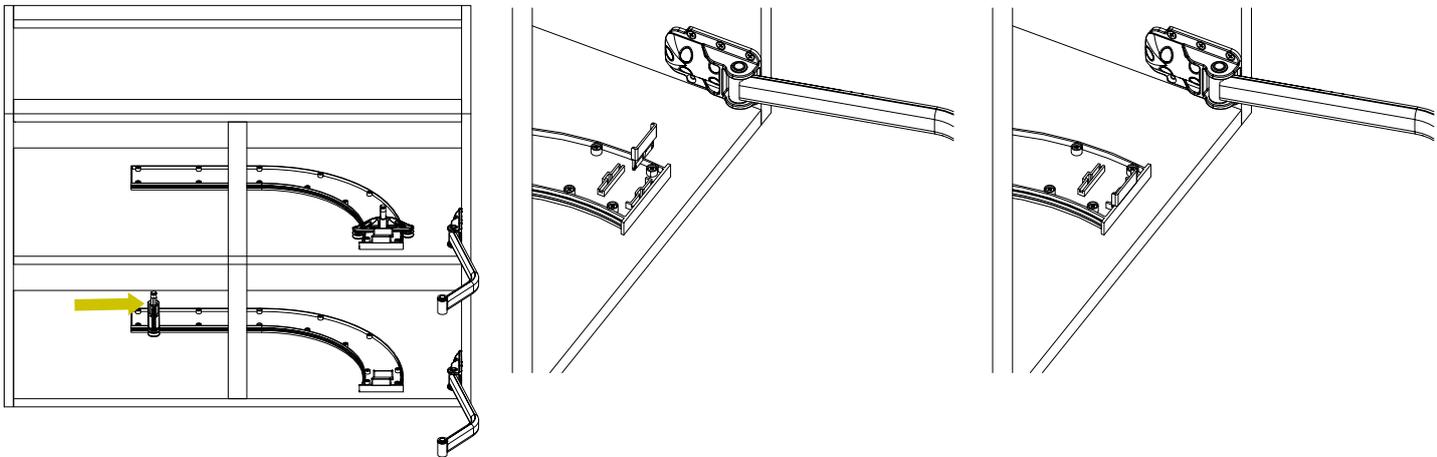

4





Put the rotation pin G along with the stopper F into the slide B.

Put the shelf into the mechanism C and into the rotating support G previously mounted.





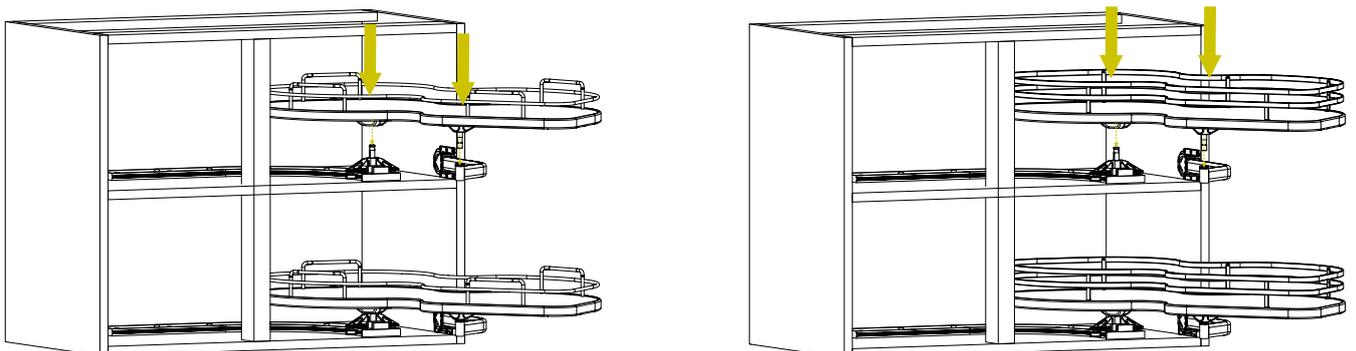


## SOFT CLOSE OPTIONAL

Inserire il perno in metallo nel supporto del soft close come figura.  
Install the metal pin to the soft close support as shown.  
Installez la tige de métal sur le support de l'amortisseur comme indiqué.  
Colocar el perno metálico en el soporte del soft close como se ve en la imagen.

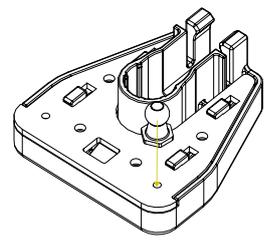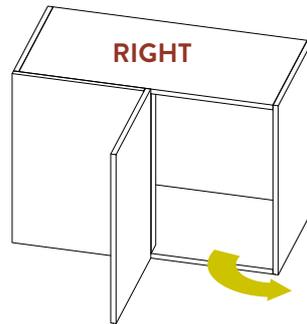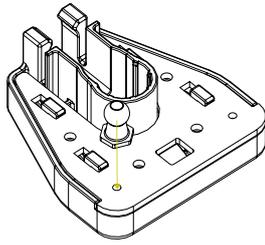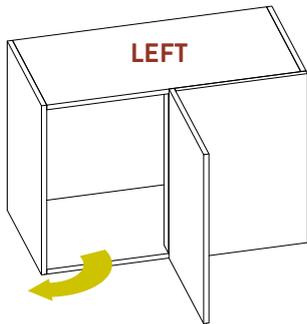

Install the metal pin under the shelf using the pre drilled holes. Attach the soft close support to the arm support (fig.1).  
Attach the shelf to the track and support arm as shown (fig.2). Install the soft close dampener to the pins (fig.3).

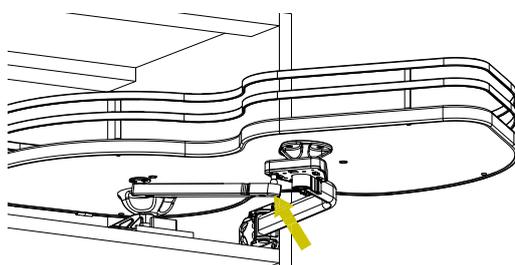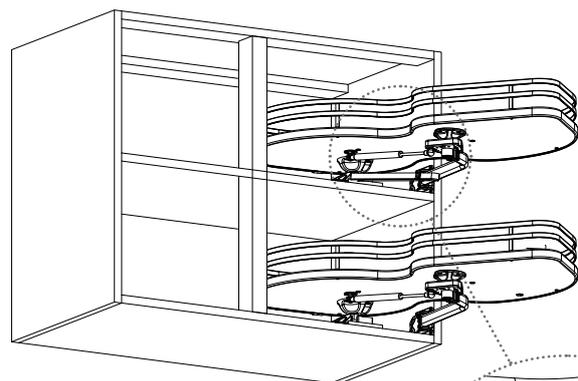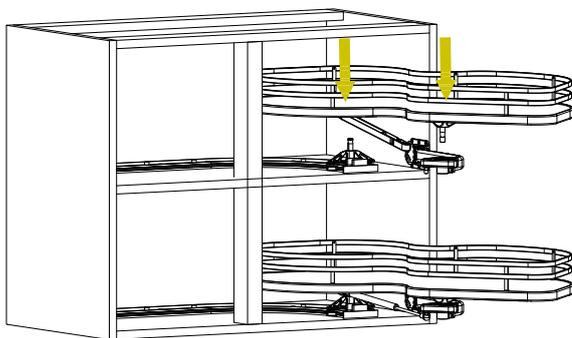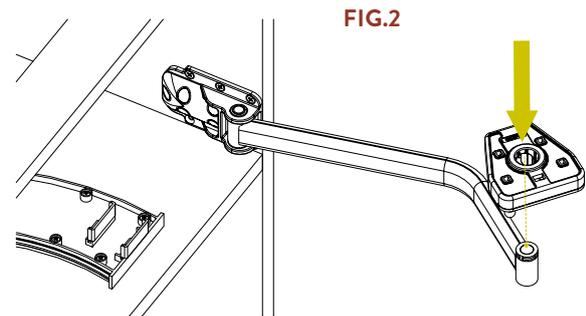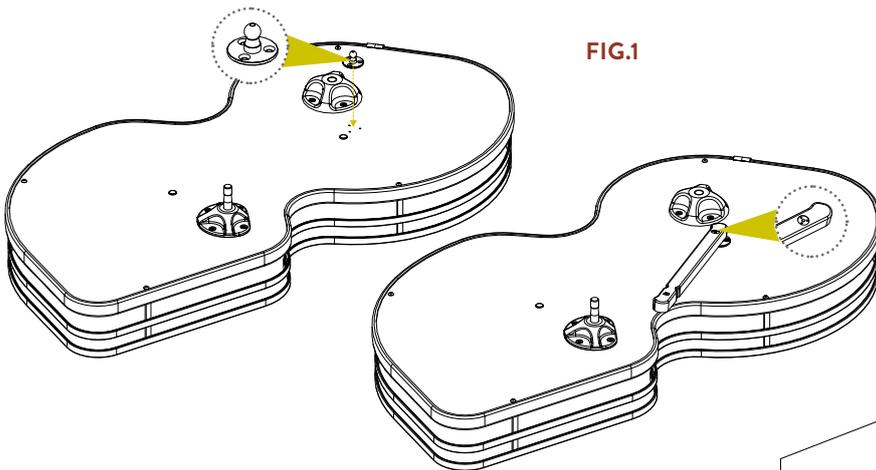

REMOVE

