




Select Mira Shelf Components

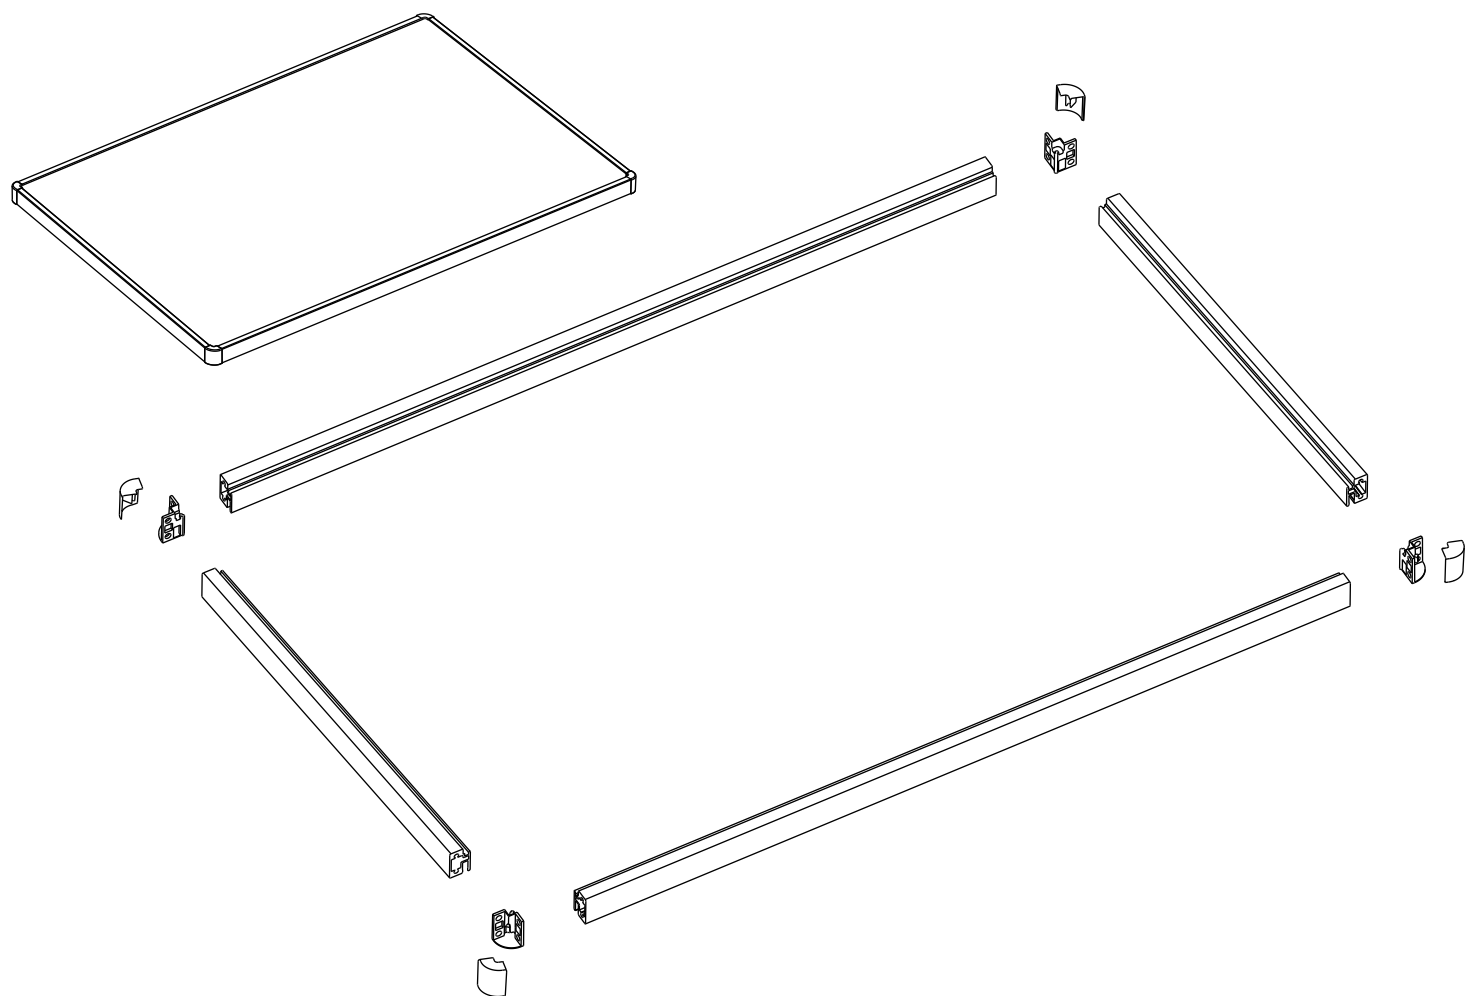

Aluminum frame profile

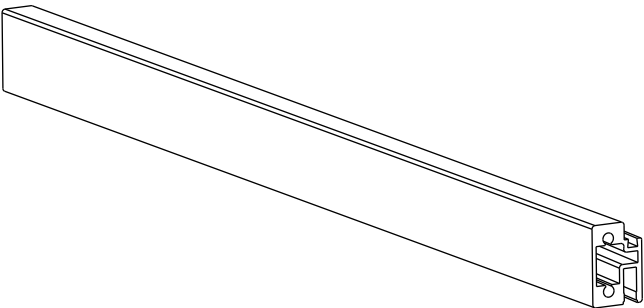

Assembly kit



Angle brackets




Cover



Screws

Shelf supports

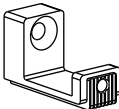

Silicone gasket




Not supplied:
4mm Glass
LED

Select Mira Shelf


Custom Cutting Instructions

Wardrobe

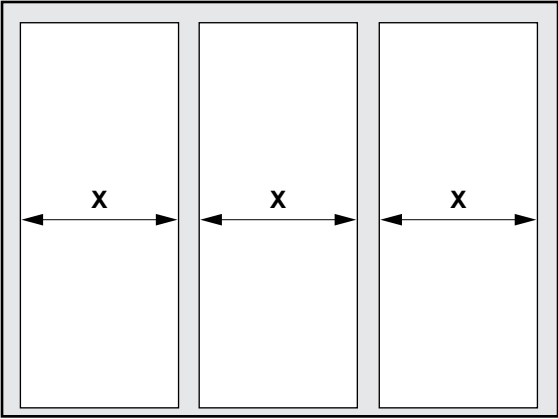

PROFILE LIST

FRAME PROFILE

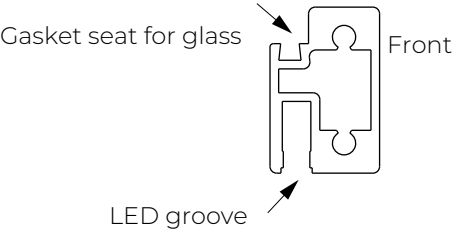


LEGEND

- X** = wardrobe opening width
- L1** = shelf width
- L2** = shelf depth
- A** = width cutting size
- B** = depth cutting size

PROFILE CUTTING INDICATIONS

The overall dimensions (L1, L2) are calculated based on the aluminum profiles and not from the zamak details

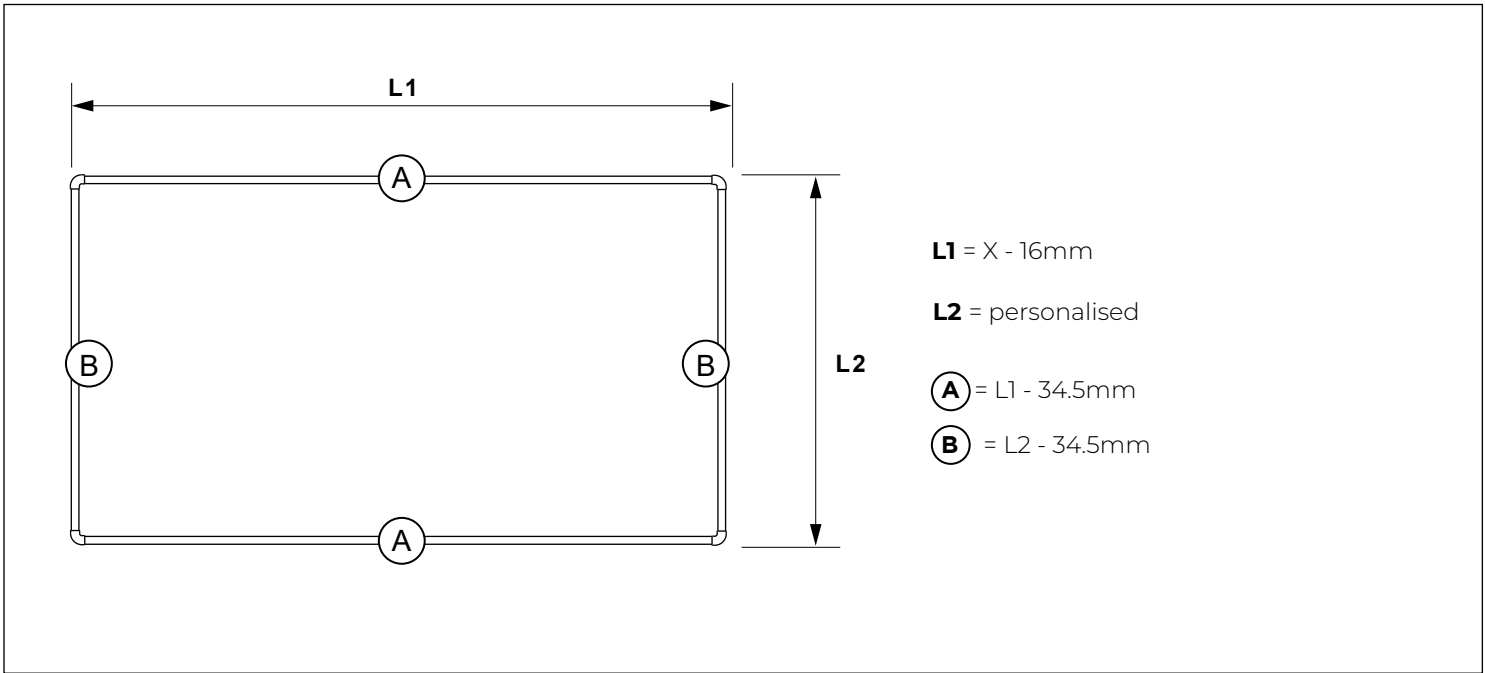


GLASS CUTTING INDICATIONS

Width cutting size = L1 - 22.5mm
Depth cutting size = L2 - 22.5mm


Select Mira Shelf

Assembly Instructions


- 1a ONLY FOR LED**
Make 1 or 2 holes Ø 10mm on the back of the rear profile

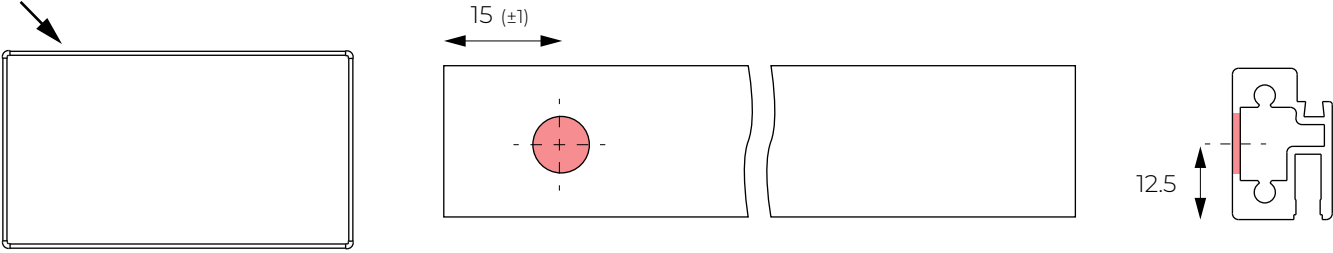



- 1b LED positioning**
Before assembly, bring the cable out at the back of the shelf

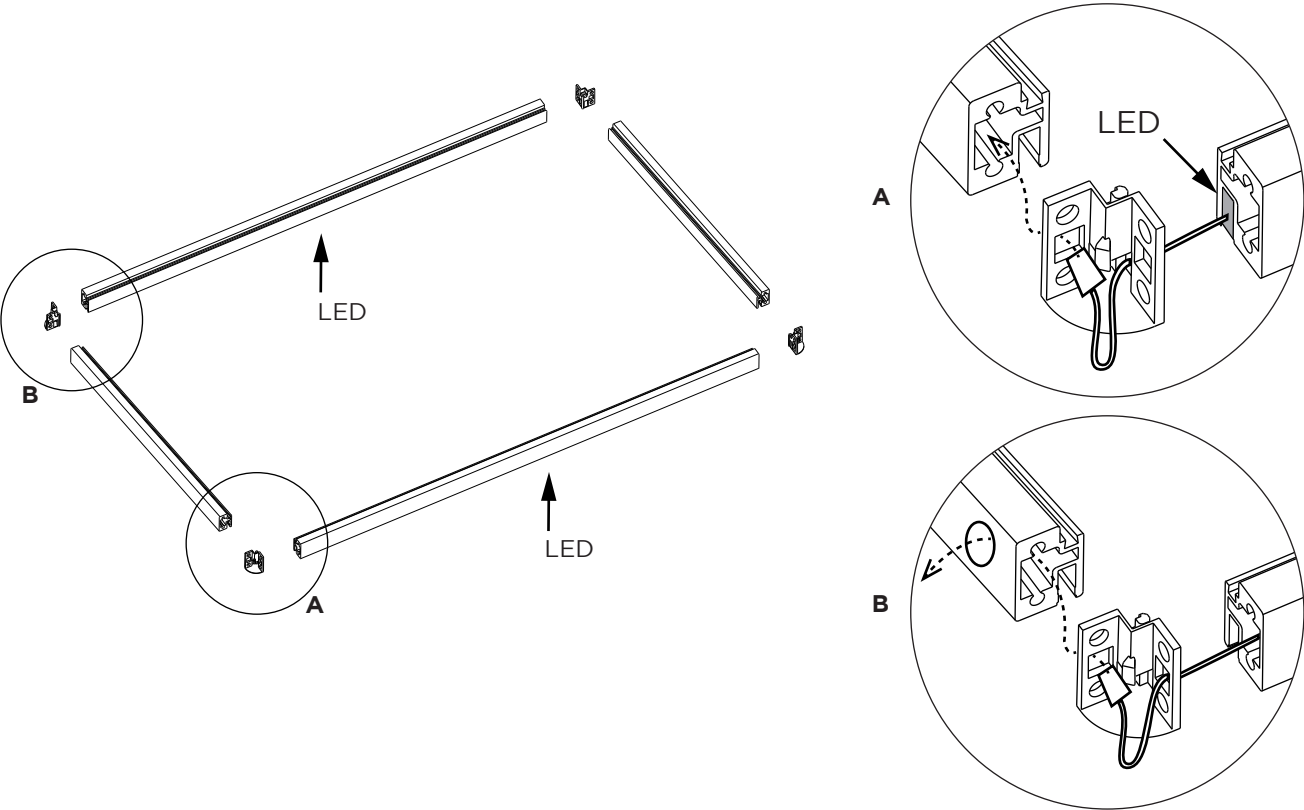



- 1c** Insert the LED into the appropriate groove

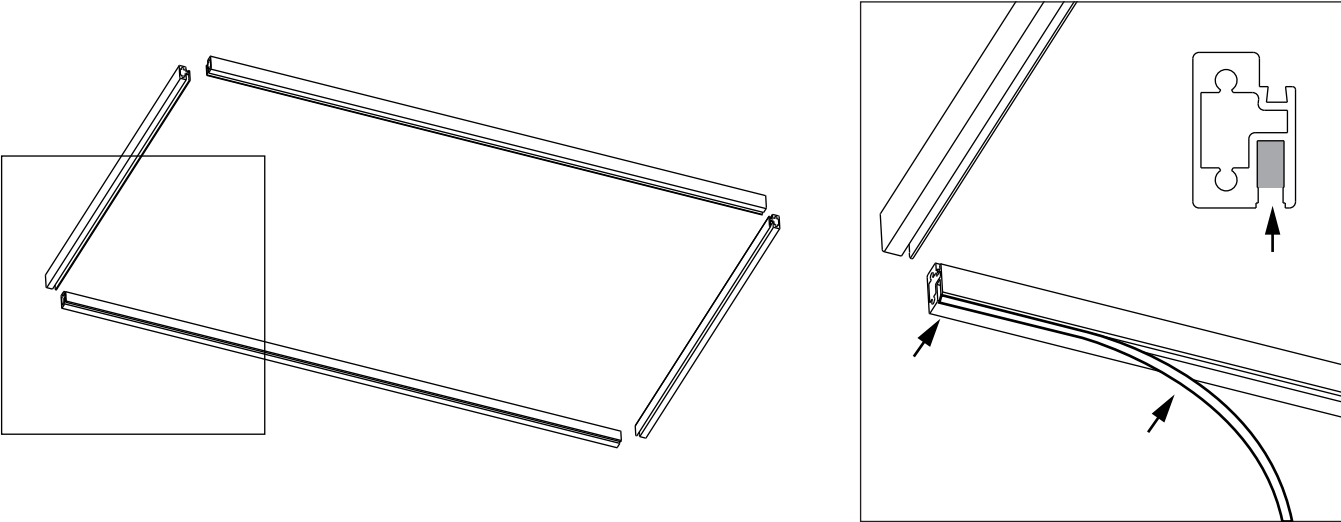


2

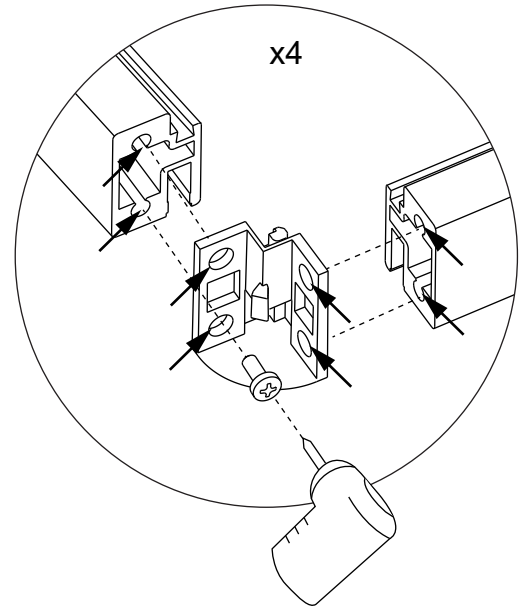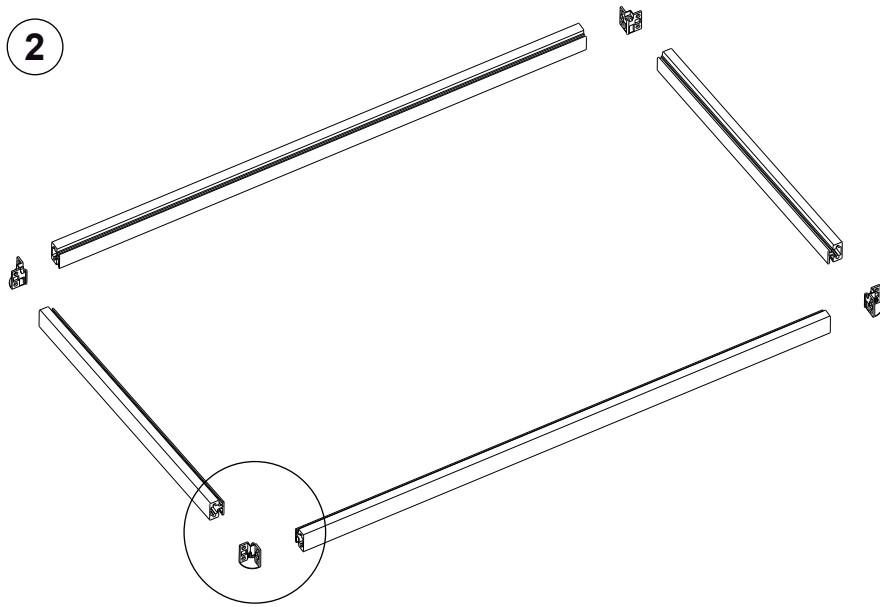

3

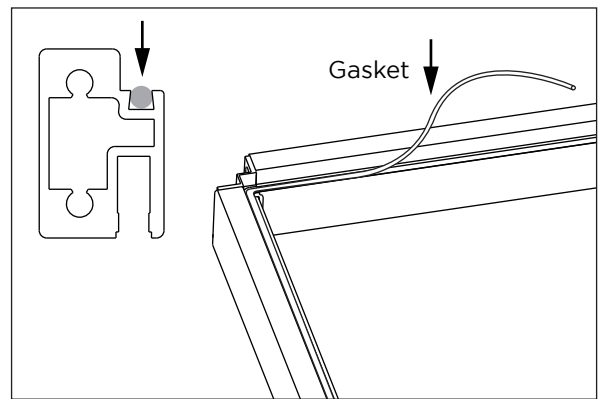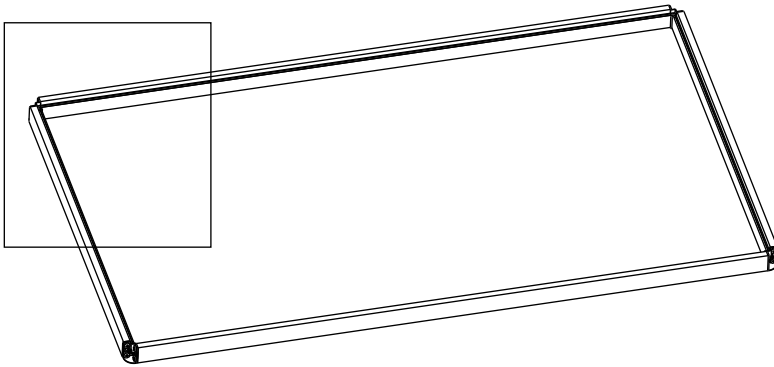

4

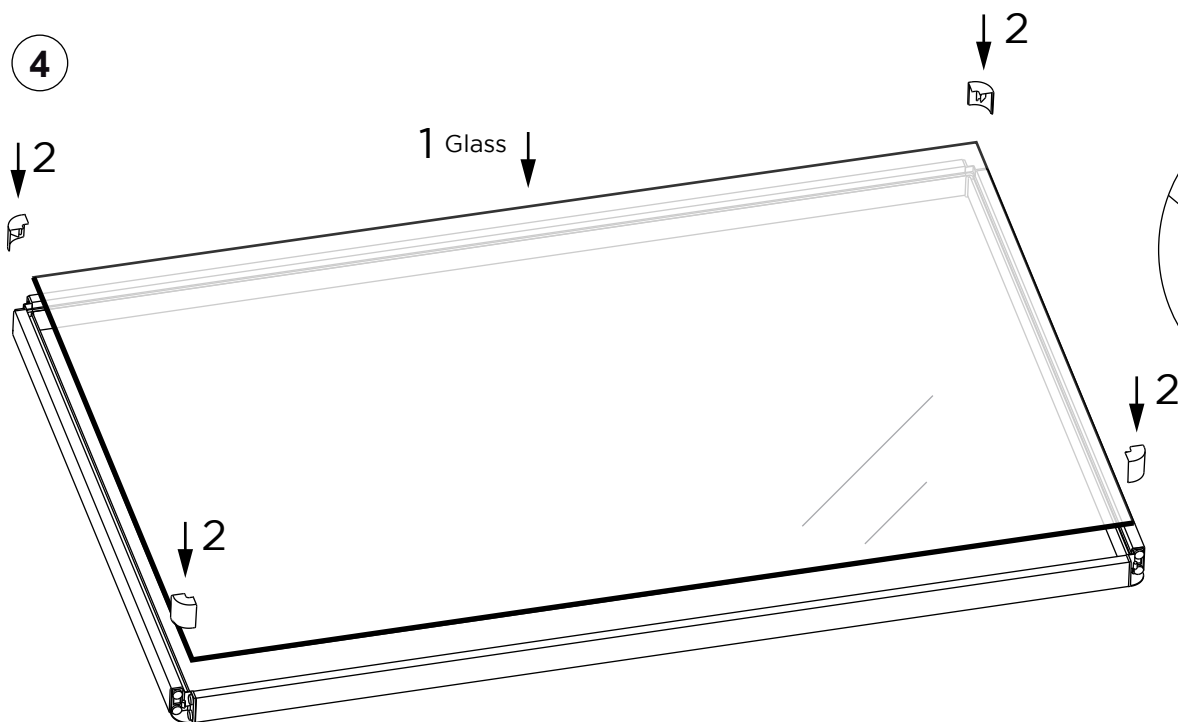

- 5** Fit the shelf supports in the wardrobe



Screws recommended: self-tapping screw TPS Ø 3.5



- 6** Place the fixed shelf on the shelf supports and screw the 4 grub screws with the hexagonal key

