




Fitting Instructions: SELECT Magic Corner Pull Out Unit

www.questhardware.co.uk
01280 822062




PARTS

- A. N°1 Lower structure
- B. N°1 Upper structure
- C. N°1 Sheet metal profile
- D. N°1 Profile covers
- E. N°1 Right and left covers
- F. N°1 Damping
- G. N°1 Kit basket
- H. N°1 Mounting template
- I. N°8 Hooks (inside basket box)


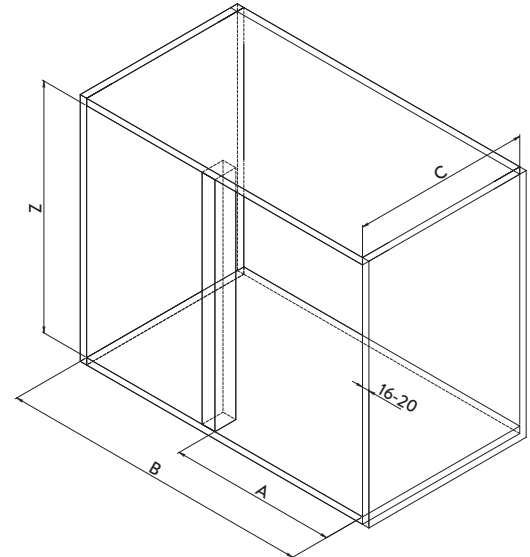




DOOR	A	B	C
400	Min. 360	760	480
450	Min. 410	760	480
500	Min. 460	760	480
600	Min. 560	960	480

	TWO TIER	THREE TIER
Z MIN.	540	770

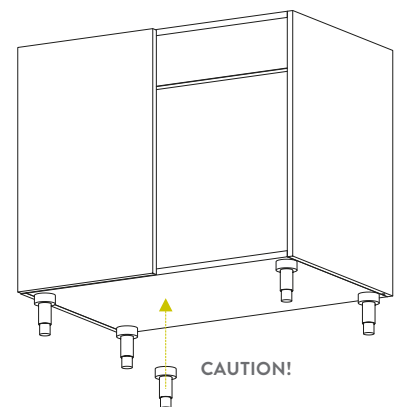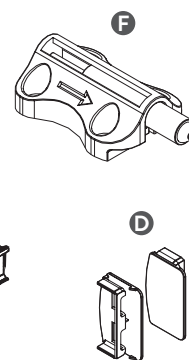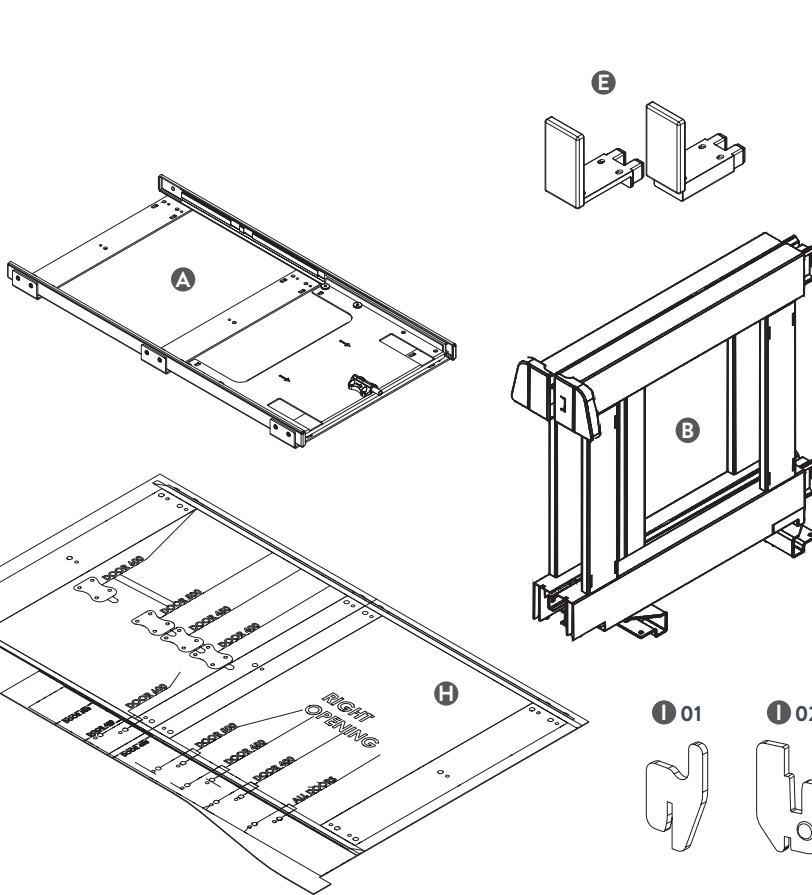



ATTENTION: SEPARATE
PACKAGING

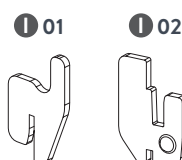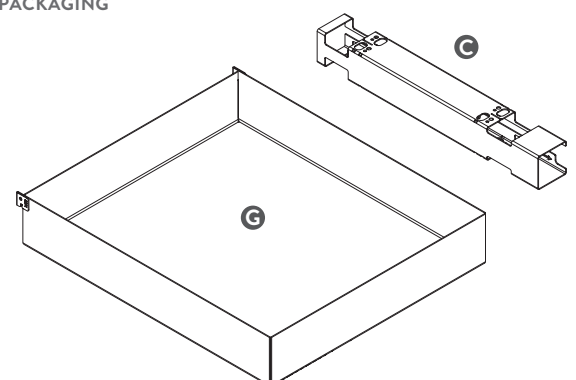

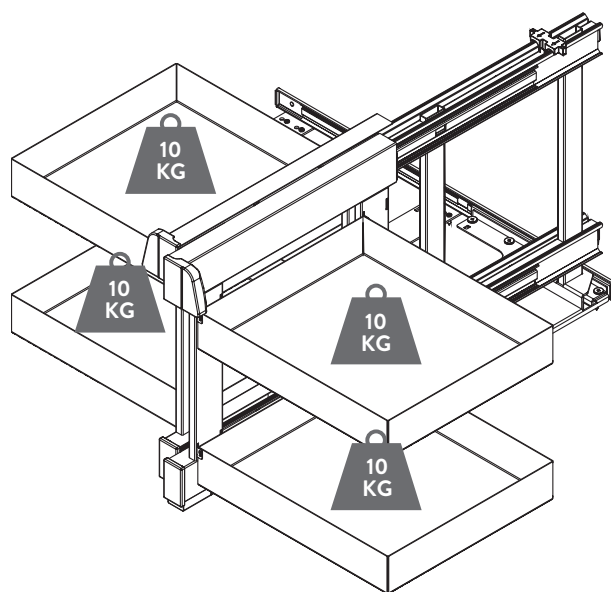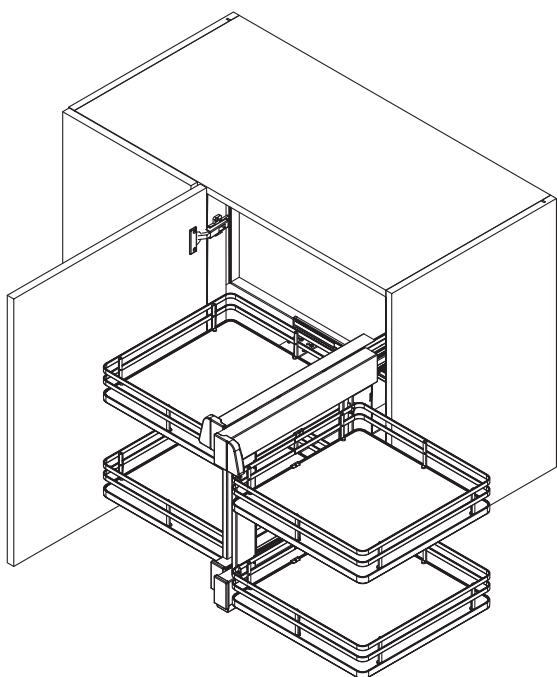

1

Pre-drill the cabinet using the template provided, in the case of euro screws use a Ø5mm bit.

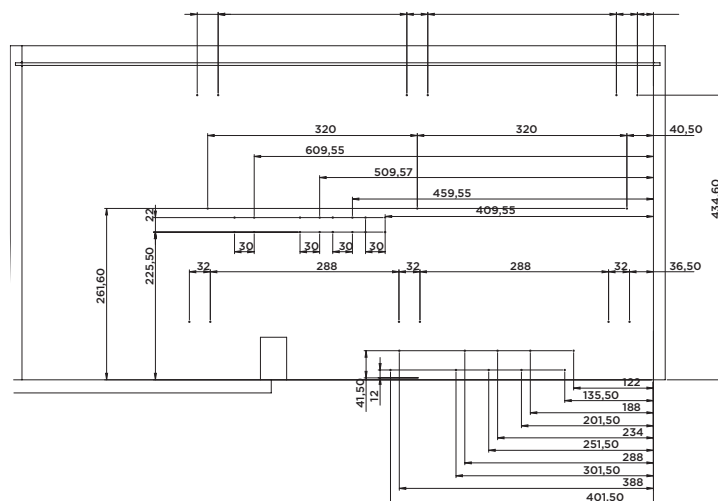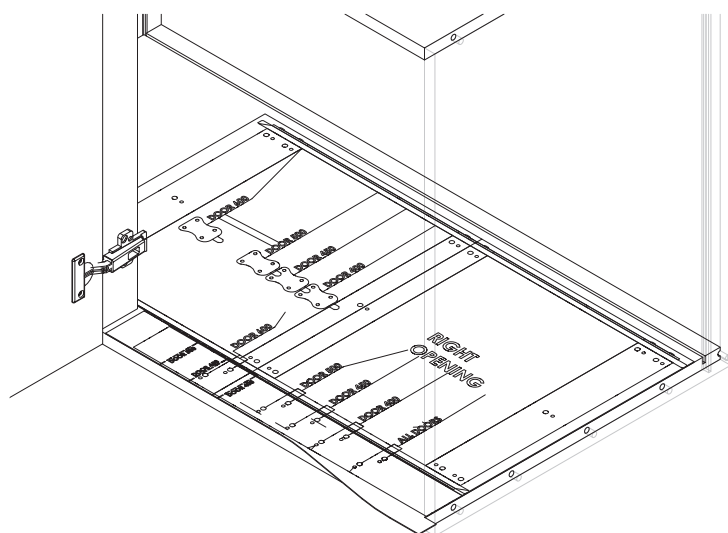

2

N°23 4x18










Cut the plastic band and fix the lower structure (A), the damping (F) and the sheet metal profile (C) to the bottom of the furniture.

N.B.


Sheet metal profile "C" is placed inside the basket packaging.

Before tightening the screws, make sure that the arrows point towards the right side of the cabinet.

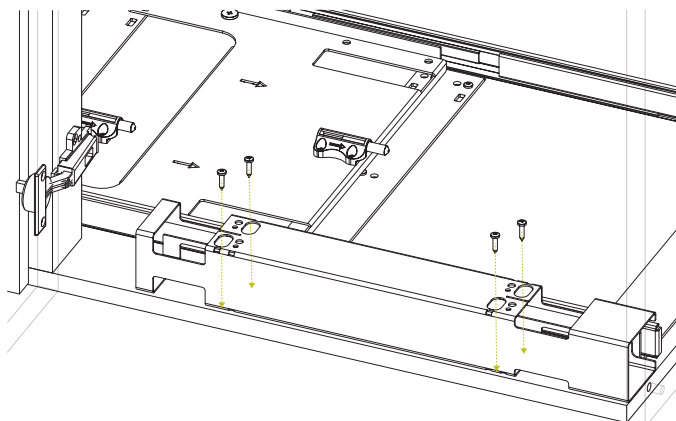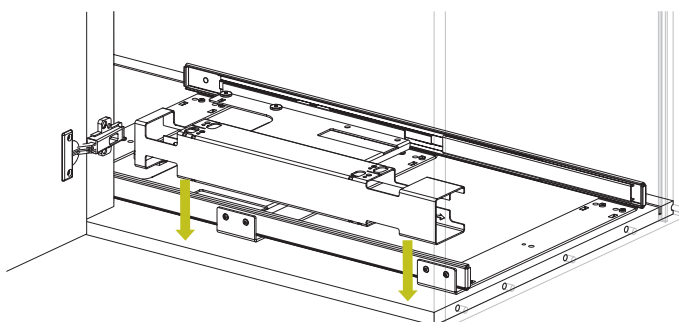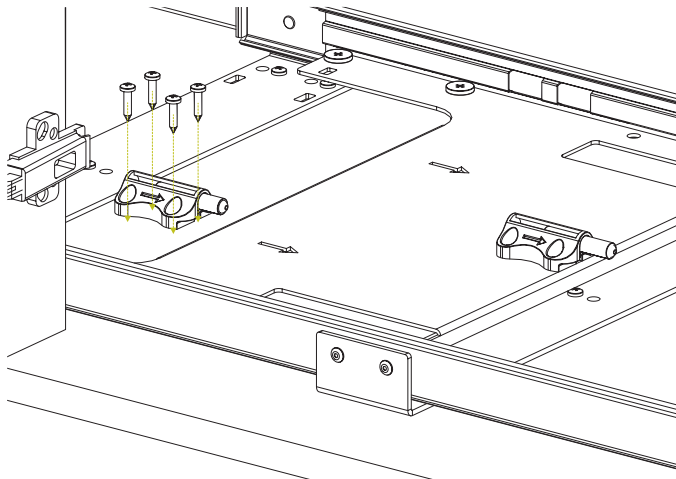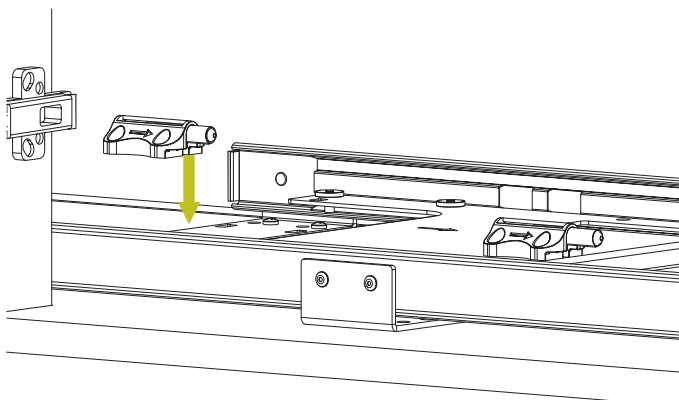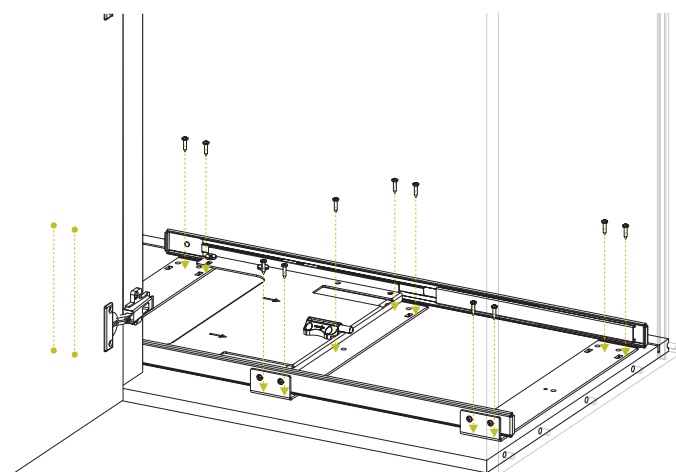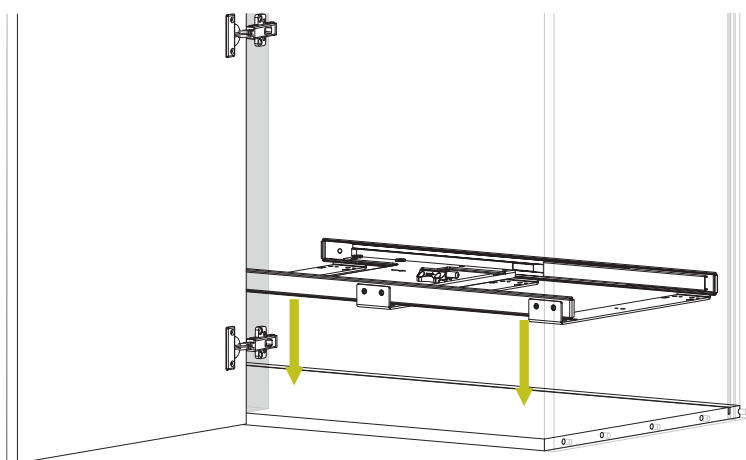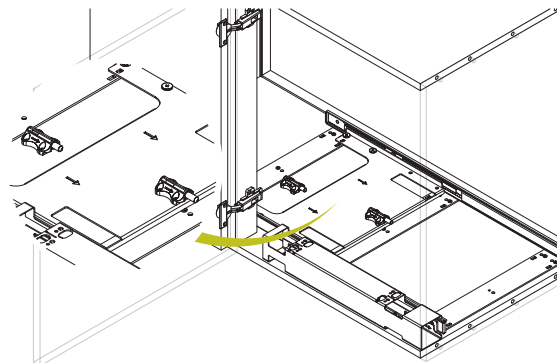

3

Insert the covers (D) in the sheet metal profile (C).


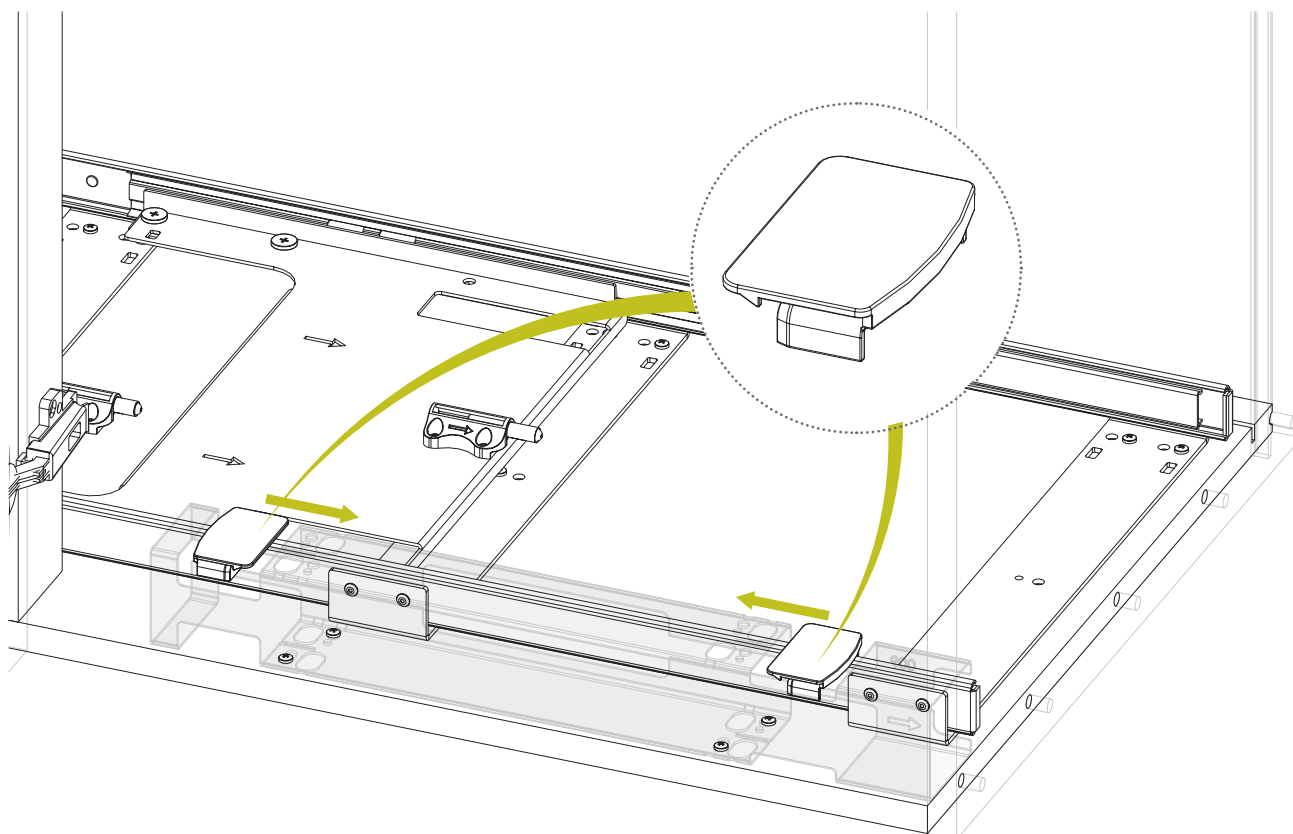


4


N°4 4.2x9.5



Insert the caps (E) in the upper structure (B) and screw them in with the appropriate screws.

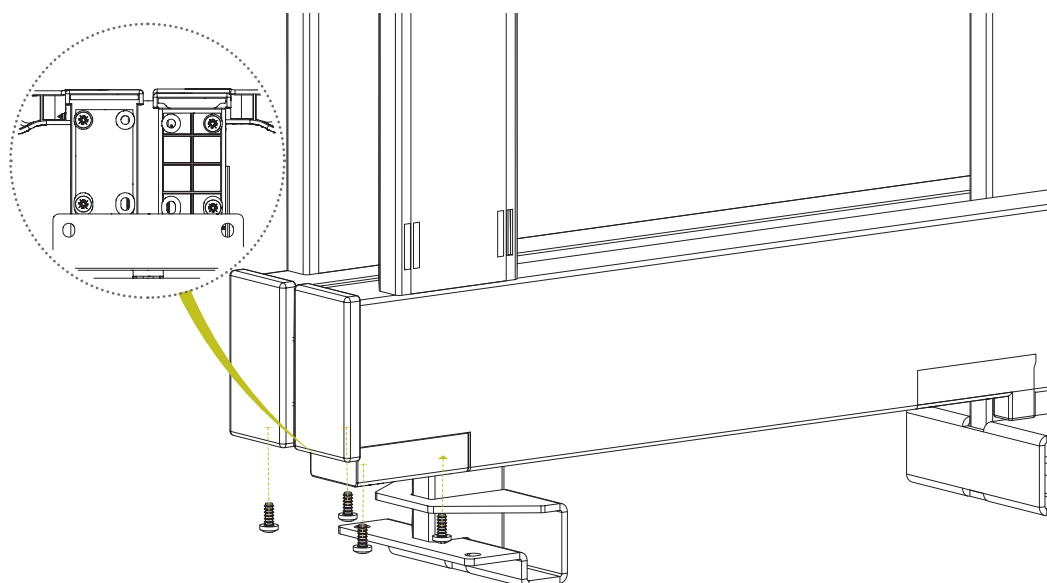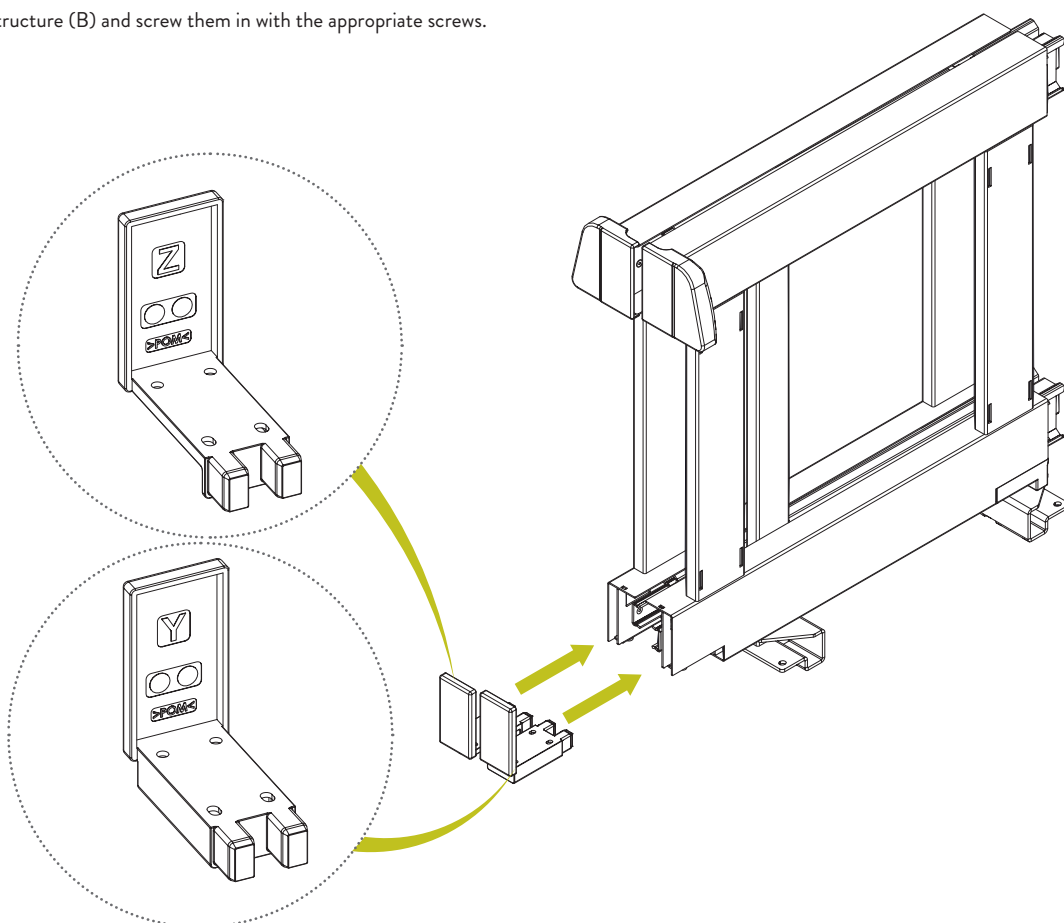**N.B.**

When assembling the left-hand version, the two caps (E) must be reversed.



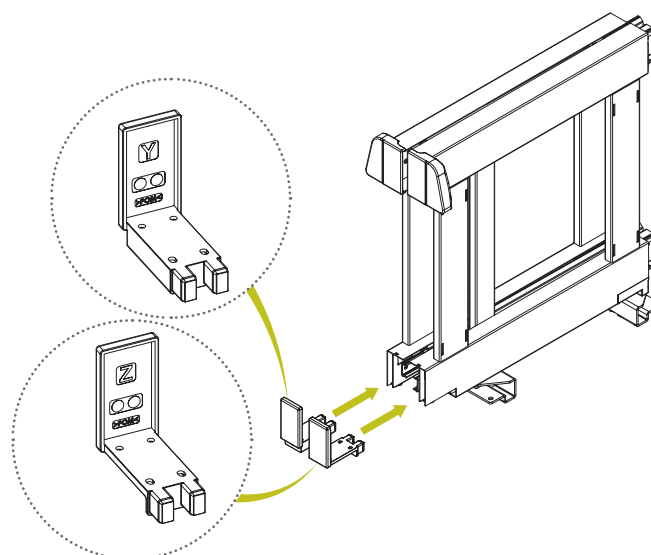


5

N°4 M5x8




Rest the upper structure on the plate. Extract the right part and insert the two screws, slide it all the way and extract the left part, finally tighten the other two screws.

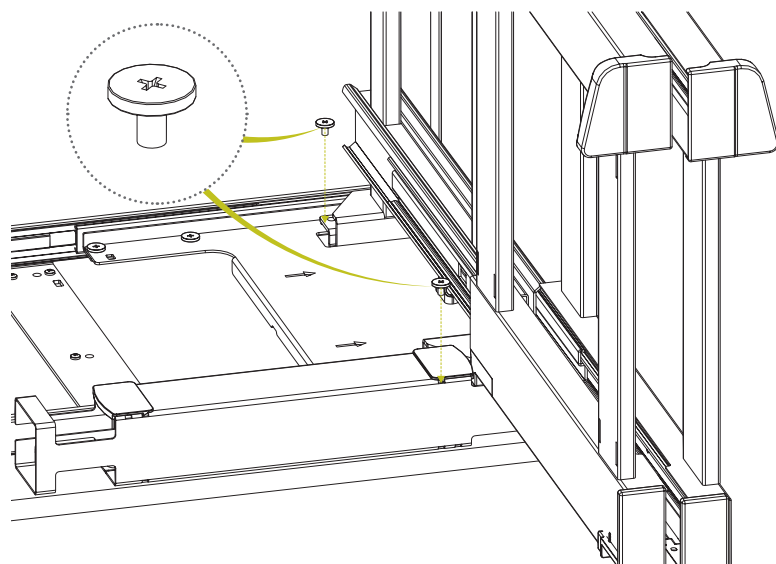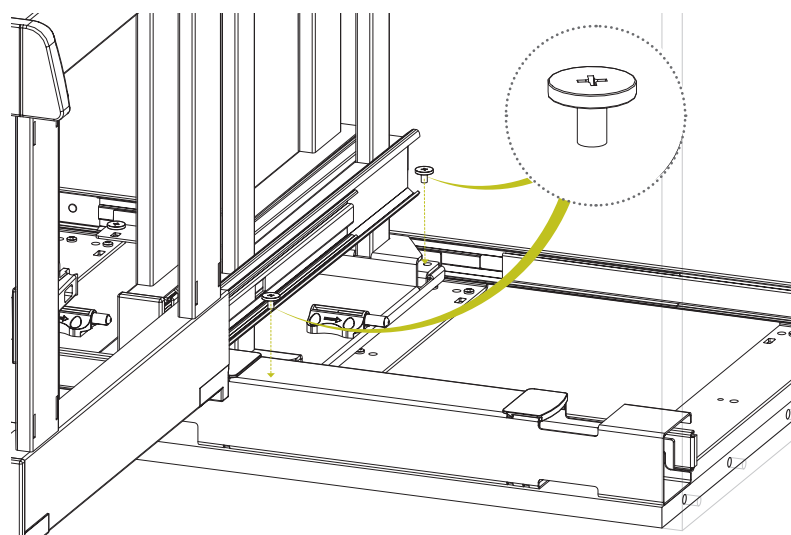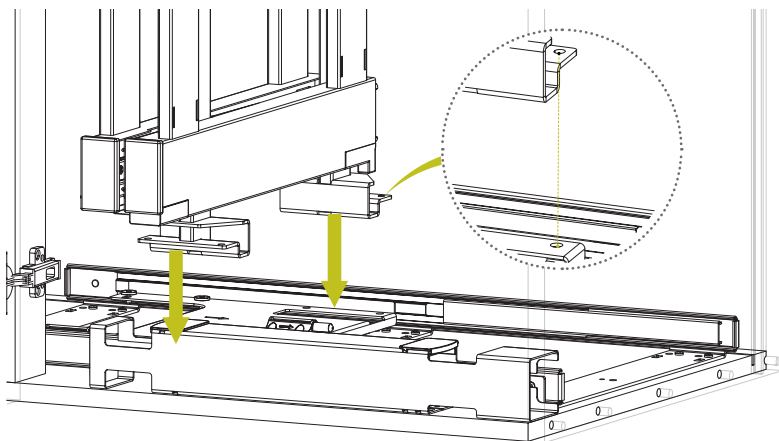

6

Insert the baskets (G). If the upright is present in the cabinet, assemble the staggered baskets as shown in figure 1.

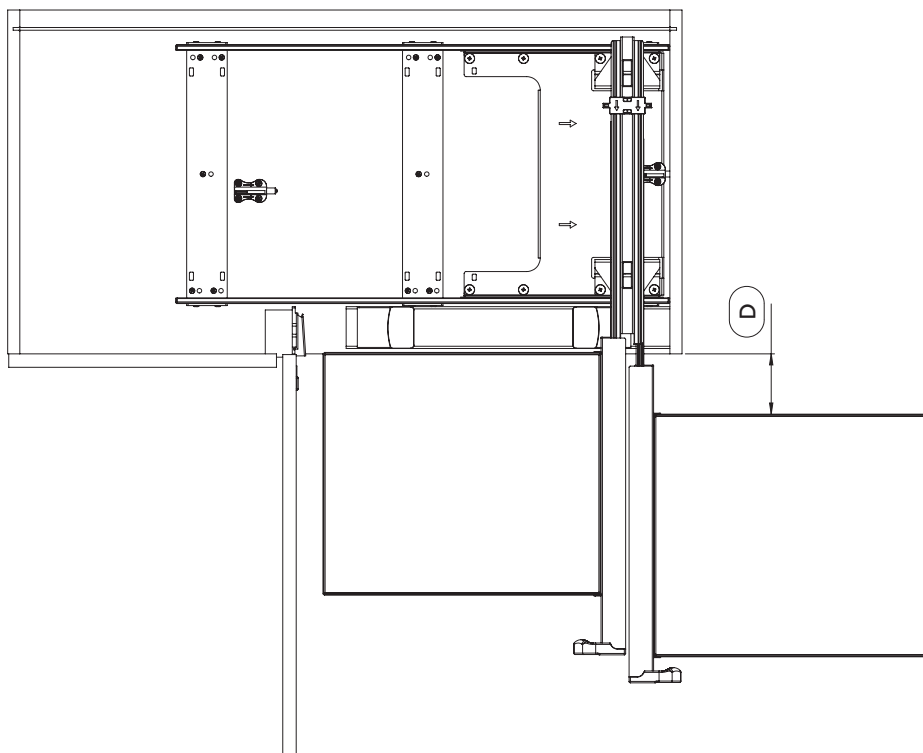

D [mm]
65

