



# Fitting Instructions – Double Door Wooden Magnetic Catch

## Step 1: Fixing the Magnetic Catch

### Option 1: Using the Drill Template (Recommended)

1. Print the installation template (page 2).
2. Align it with the inside edge of the cabinet and tape it in place.
3. Drill a 2mm pilot hole at the marked position.

### Option 2: Manual Positioning

1. Measure 34mm back from the inside front edge of the cabinet.
  2. Measure 21.5mm across to mark the screw positions.
  3. Drill a 2mm pilot hole.
  4. Insert the 4.5mm screw, leaving 5-6mm exposed.
  5. Align the keyhole slot on the catch with the screws and slide down to lock in place.
  6. Secure with a 3.5 x 20mm screw in the back fixing hole.
- 

## Step 2: Installing the Adhesive Plate

### Measuring the Door Position

1. With the wooden catch installed, measure:
  - From the inside front edge of the cabinet to the centre of the magnet (depth).
  - From the inside cabinet side to the centre of the magnet (side-to-side).
2. Transfer these measurements to the inside of the door and mark the spot.

### Mounting Options


- Adhesive Plate (Quick Install): Peel and stick the adhesive plate onto the marked spot. Let it set before use.
- 

## Step 3: Testing & Adjustments

1. Open and close the door and ensure the adhesive plate aligns correctly with the catch.
2. Adjust if needed.



## Installation Template

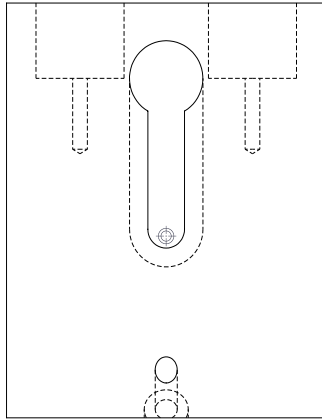

---

**Print template using the 'Actual size' setting for accurate size**

