



Fitting Instructions – Single Door Wooden Magnetic Catch

Step 1: Fixing the Magnetic Catch

Option 1: Using the Drill Template (Recommended)

1. Print the installation template (page 2).
2. Align it with the inside edge of the cabinet and tape it in place.
3. Drill a 2mm pilot hole at the marked position.

Option 2: Manual Positioning

1. Measure 34mm back from the inside front edge of the cabinet.
 2. Measure 10mm across to mark the screw positions.
 3. Drill a 2mm pilot hole.
 4. Insert the 4.5mm screw, leaving 5-6mm exposed.
 5. Align the keyhole slot on the catch with the screws and slide down to lock in place.
 6. Secure with a 3.5 x 20mm screw in the back fixing hole.
-

Step 2: Installing the Adhesive Plate

Measuring the Door Position

1. With the wooden catch installed, measure:
 - From the inside front edge of the cabinet to the centre of the magnet (depth).
 - From the inside cabinet side to the centre of the magnet (side-to-side).
2. Transfer these measurements to the inside of the door and mark the spot.

Mounting Options


- Adhesive Plate (Quick Install): Peel and stick the adhesive plate onto the marked spot. Let it set before use.
-

Step 3: Testing & Adjustments

1. Open and close the door and ensure the adhesive plate aligns correctly with the catch.
2. Adjust if needed.



Installation Template

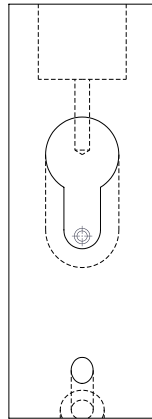

Print template using the 'Actual size' setting for accurate size

